

The display on your Samsung telephone includes an interactive menu, providing easy access to a wide variety of features. To access these features, simply press the button located directly beneath the feature label on the display. These buttons are referred to as “soft keys” To display more features, press the SCROLL button when “→” is displayed.

**LABEL** refers to a button on the phone

**TEXT** refers to an option on the display menu.

It may be necessary to press the SCROLL button to display the desired feature.

**DS** refers to a direct station button, typically labeled with the names and extension of other users.

**EXTN** refers to an extension number.

**CALL** buttons are color-coded. Green indicates your call. Red indicates another extension's call. Yellow indicates a recall from hold.

## Making Calls

**Place a Call** - **9** + telephone number.

**Redial Last Number** - **REDIAL** or **1 9** + **VOL↑↓** to select one of your recently dialed numbers + **DIAL** or **REDIAL**, or select **NND** to view date/time of call.

**Phonebook** - **PHONEBOOK** or **\* 0** + **PERS** or **SYS** or **STN** + first letter of party's name + **VOL↑↓** + **DIAL**.

**Speed Dial** - **SPEED** or **1 6** + a speed dial bin number (00 to 49 or 500 to 999). If your phone is configured with one-touch speed dial buttons, simply press the button instead.

## Processing Calls

**Answer Call Ringing at Your Phone** - lift handset or press **ANS/RLS**.

**Answer Call Ringing at Another Phone using DS** - press flashing **DS** button.

**Answer Call Ringing at Another Phone w/o DS** - press **RING P/U** or **6 5** + **EXTN**.

**Place Call On Hold** - **HOLD** and hang up.

**Place Call on Exclusive Hold** - **HOLD HOLD** and hang up. Can be retrieved from your phone only.

**Retrieve Call from Hold** - press flashing **CALL** button.

**Retrieve Call on Hold at Another Extension** - **HOLD P/U** or **1 2** + **EXTN**.

**Transfer Call Using DS Button** - Press **DS**, announce call and hang up. For a blind transfer, do not announce call. Just hang up after pressing **DS**.

**Transfer Call w/o DS button** - **TRANSFER** + **EXTN**.

**Cancel Transfer** - Press **TRANSFER** or **CALL**.

**Place Call on Hold at Another Extension** - **TRANSFER** + **EXTN**. Announce Call. **HOLD**. This can also be performed if destination extension is busy.

**Transfer Call to Busy Extension** - **TRANSFER** + **EXTN** (receive busy) + Hang up. Call will ring through to busy Extension.

**Park a Call** - **TRANSFER** + **1 0 \***. Read display to determine park orbit where call was parked.

**Pickup a Parked Call** - **1 0** + park orbit 0-9

## Intercom Calls

**Calling Another Extn using DS Button** - Press **DS**.

**Calling Another Extn w/o DS Button** - dial **EXTN**.

**Busy Extension Callback** - Dial busy extension. Hear busy signal. Press **CBK**. Your phone will ring when the extension becomes idle.

**Busy Extension Camp On** - Call busy extension. Hear busy signal. Press **CAMP**. You will hear ringing tone and dialed extension will ring.

**Paging** - **PAGE** + single digit page zone. Announce after tone.

**All Call Paging** - **PAGE** + **\***. Announce after tone.

## Convenience Features

**Station Ring Group Log In/Out** - dial **\* 5 3** + group number + **IN** or **OUT**. (or 1 or 0)

**Do Not Disturb** - **DND** or dial **4 0 1**. To clear DND, press **DND** or dial **4 0 0**.

**One-Time DND** - (requires **DND** button). During call, press **DND**. After completion of call, DND will automatically deactivate.

**Caller ID** - while on a call, **CALLER ID** or **CID**. **NND** toggles display of name/number/date&time.

**Group Listen** - with call on handset, press **LISTEN**.

**Conferencing** - on first call. Press **CONF**. Make next call. Press **CONF**. Press **CONF** again to connect all parties. Process prior to final **CONF** button may be repeated to create up to a five-party conference.

**Handset Volume** - while on a call, use **VOL↑↓** to adjust your receiver volume.

**Speaker Volume** - while using the speakerphone, use **VOL↑↓** to adjust speakerphone volume.

**Station Volume** - with your phone idle and on-hook, you may preset your various volume levels by pressing **TRANSFER** + **1 1 4** and using **VOL↑↓** to select the item you wish to preset. Press the rightmost softkey to move the cursor to the current level, then press **VOL↑↓** to adjust the level. Press **TRANSFER** again to finish. Volume controls which you can preset are: Ringing, Off-Hook Ringing, Handset, Speakerphone, Background Music, and Paging.

## Voicemail Features

(Refer to voicemail quick reference guide for description of voicemail features & usage. This section only describes the buttons on your telephone related to voicemail)

**Access Voicemail** - **VOICEMAIL** or dial voicemail extension number.

**Transfer Call to User's Voicemail** - **VM XFER** + **DS** or dial **EXTN** + hang up.

**Send Ringing Call to Voicemail** - while call is ringing, press **#**.

**Record Conversation** - press **RECORD**.

## Customizing Your Telephone

**Programming Personal Speed Dial** – with your phone idle and your handset on-hook, press **TRANSFER** + **1** **0** **5** + bin number (00-49) + number as you would dial it manually + **TRANSFER**. Note: your phone may be equipped with from 0 to 50 speed dial bins. Default setting is 10 bins per phone.

**Programming Speed Dial Names** – with your phone idle and handset on-hook, press **TRANSFER** + **1** **0** **6** + bin number (00-49). Use the digits on your dial pad and **VOL** **↑** **↓** to enter the name. **HOLD** erases.

**Programming Key Extenders** – certain buttons, such as DS, SPEED and GROUP IN/OUT buttons allow the programming of an “extender”. This specifies the extension, bin or group number of a button. To change an extender, with your phone idle and handset on-hook, press **TRANSFER** **1** **0** **7** + the button you wish to program + extender data + **TRANSFER**. Example: to program a DS key for extension 201, press **TRANSFER** + **1** **0** **7** + **DS** + **2** **0** **1** + **TRANSFER**.

**Selecting a Ring Tone** – with your phone idle and handset on-hook, press **TRANSFER** + **1** **1** **1** and use **VOL** **↑** **↓** to select a ring frequency. Press **TRANSFER** again to finish.

**Setting Intercom Answer Mode** – your phone offers three intercom calling modes: AUTO is the default mode and offers full handsfree operation; RING requires you to answer intercom calls manually; and VOICE offers automatic voice announcement but not auto hands-free answer back. You must either lift your handset or press ANS/RLS to activate your microphone. To change your Intercom Answer Mode, with your phone idle and your handset on-hook, press **TRANSFER** + **1** **0** **3**, use **VOL** **↑** **↓** to select a mode and finish by pressing **TRANSFER**.

**Changing Your Station Name** – with your phone idle and handset on-hook, press **TRANSFER** + **1** **0** **4**. Use your dial pad and **VOL** **↑** **↓** to enter a new name. **HOLD** erases.

### Paging Zones:


- 1 \_\_\_\_\_
- 2 \_\_\_\_\_
- 3 \_\_\_\_\_
- 4 \_\_\_\_\_
- 5 \_\_\_\_\_
- 6 \_\_\_\_\_
- 7 \_\_\_\_\_
- 8 \_\_\_\_\_
- 9 All External Loudspeakers
- 0 All Telephones
- \* All Telephones & Loudspeakers

### Station Groups:

- \_\_\_\_\_
- \_\_\_\_\_
- \_\_\_\_\_
- \_\_\_\_\_
- \_\_\_\_\_
- \_\_\_\_\_
- \_\_\_\_\_
- \_\_\_\_\_
- \_\_\_\_\_
- \_\_\_\_\_
- \_\_\_\_\_

### Feature Access Codes:

- 10 Call Park / Park Pickup
- 12 Hold Pickup
- 16 Speed Dial
- 17 Saved Number Redial
- 19 Last Number Redial
- 40 Do Not Disturb
- 44 Busy Station Call Back
- 45 Busy Station Camp On
- \*48 Programmed Station Msg
- \*53 Group In/Out
- 55 Internal Page
- 65 Ring Pickup
- 66 Group Pickup

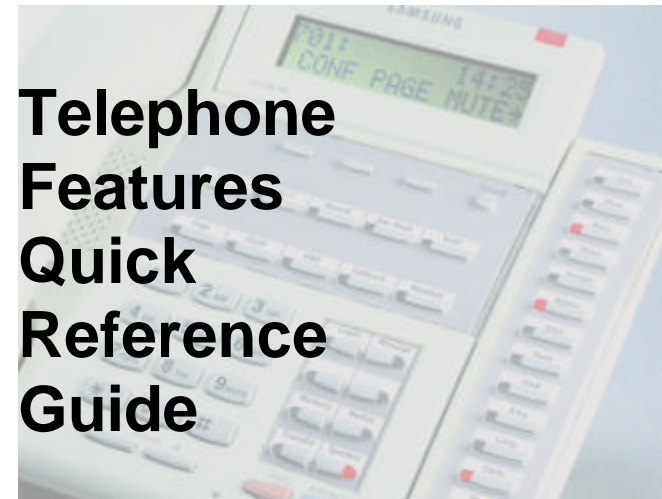

## Telephone Features Quick Reference Guide